

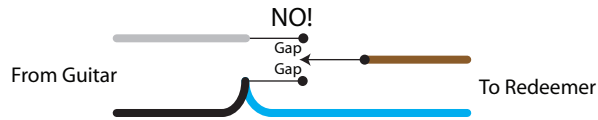
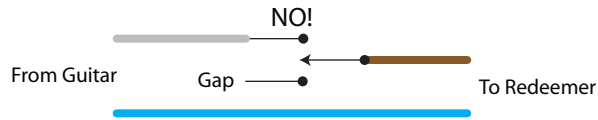


KILL SWITCH [www.CreationAudioLabs.com](http://www.CreationAudioLabs.com)

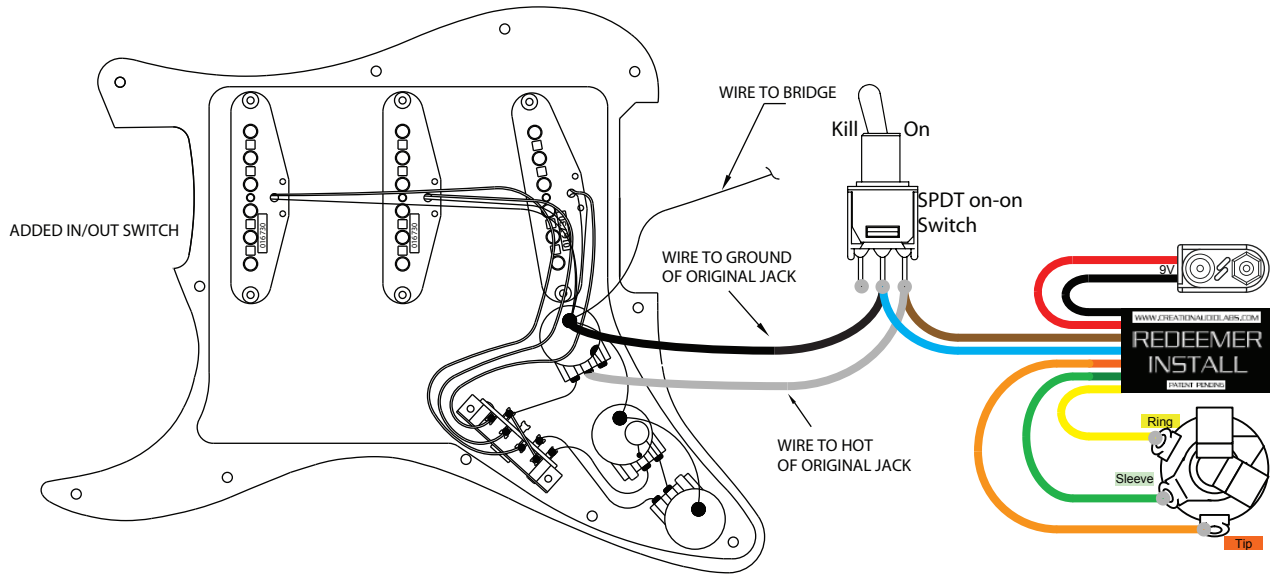

Switch Gap causes noise and pop while the outgoing wire is briefly unconnected. The unconnected wire going into a high impedance input acts like an antenna to pick-up cosmic noise; and DC leakage from FX pedals can build-up as well.

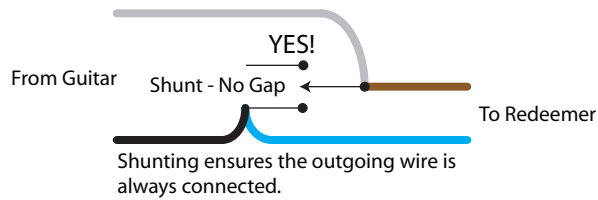

Shunting ensures the outgoing wire is always connected.

